


PEEL N STICK® Brass Seals: Site Preparation and Placement for Wood Double Hung Windows


Save
Time and
Money
Read

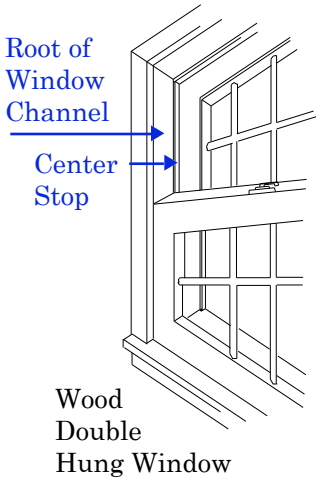




1. Remove all foreign material from the channel the sash slide in the window frame.
2. Move the sash up or down as required to remove any dust, dirt or paint runs etc that may inhibit the adhesion of PEELNSTICK® to the root of the channel in the window side frame (jamb).

The surface should be clean, smooth, flat and dry before proceeding with the Installation.

3. Cut The Brass seal for the channel the sash slide in the window frame.

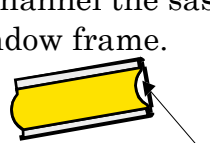

Hold the brass insert flat with your thumb while cutting with scissors

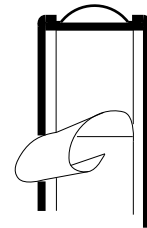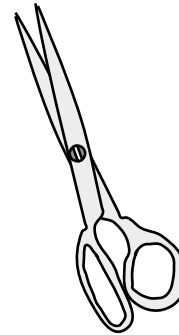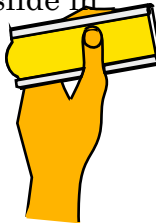

The Protective Cover

See KEL-EEZ at www.kel-eezweatherization.com

4. Cut the Brass Seal for the header and sill. Do not remove the protective cover.



See Tips and Other Considerations for style variations of wood double hung windows

5. Cut the 4 Brass Seals for the side channels (Jambs) 2 inches longer than the height of the 2 sashes

UPPER SASH and Lower sash both open and both sashes slide in channels

6. When all surfaces are smooth clean and dry remove the protective cover and install the Brass Seals in the header and sill position. Install the 4 Brass Seals in the Jamb position.

7. **NOTE:** Place a 3/4" copper coated weather strip nail 1" from the top of each Lower Sash height and 1" from the bottom of each Upper Sash height. This will alleviate any movement of the brass insert as the sashes move up and down

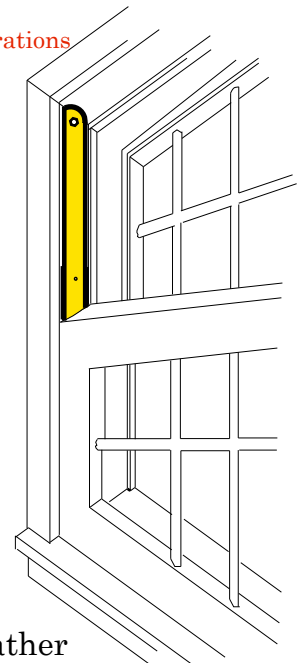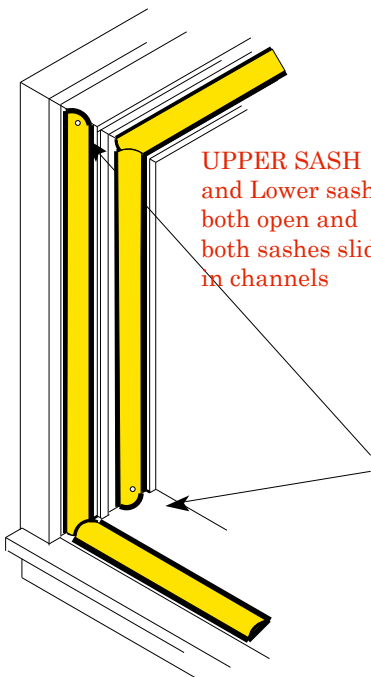

Weather Stripped Wood Double Hung Window

KEL-EEZ®
1 800 346-1995

KEL-EEZ® Weatherstripping Bldg One The Die-Gem Way
Akron Oh 44312-1539 Copyright KEL-EEZ 1971 - 2008 All Rights Reserved